



SEALS. SYSTEMS. SOLUTIONS. AT YOUR SPEED.™

## **VISESEAL - EXV INSTALLATION INSTRUCTIONS**

- Remove old packing and clean out stuffing box.
- Install VISE BEARING into stuffing box. DO NOT FORCE! Sand O.D. for slip fit, if needed.
- When bottom bearing is fully seated, install lantern ring.
- Install packing rings, tamping each ring into place as you go. Stagger cuts around shaft with each ring.
- Tighten gland to compress packing rings, loosen gland and re-tighten gland nuts to finger tight.
- Turn water on and check leakage. Three (3) or Four (4) drops per minute is ideal.
- Adjust packing gland as necessary, turn two (2) flats on gland nuts per adjustment.

  Allow at least 15 minutes between adjustments.

## **EXV**

- 1.SHAFT
- 2. PACKING
- 3. LANTERN RING
- 4. BEARING
- **5. STUFFING BOX**
- 6. GLAND FOLLOWER
- 7. FLUSH MEDIA

